
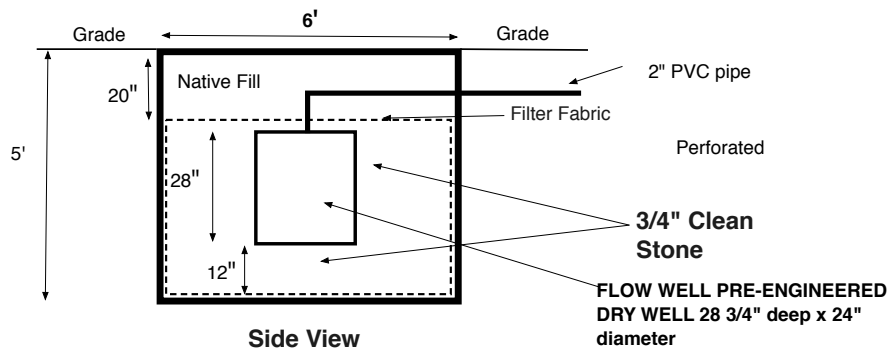


**General Notes**

1. Trench will be 12" deep sloped to dry well and connected to existing sump pumps located in basement.
2. Sump pumps will be T's in basement and plumbed from 1 1/2" piping to 2" piping to dry well.
3. Wall penetrations will be sealed with hydraulic cement.
4. All trenches will be covered with filter fabric and magnetic locating tape approximately 1 foot above top of piping.

**Top View**

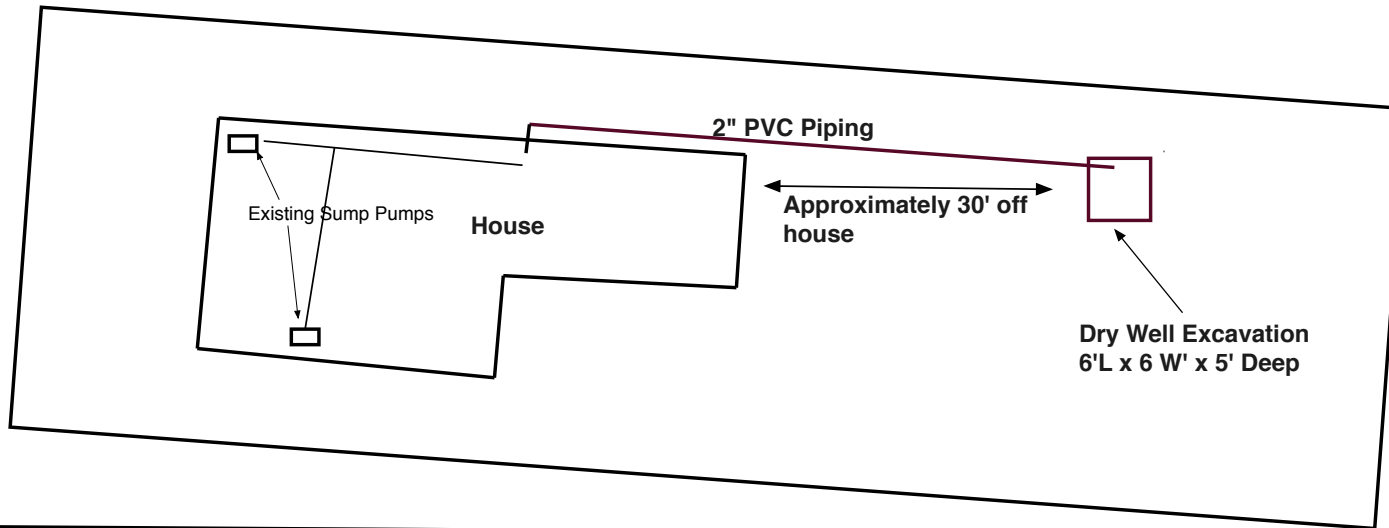

PO Box 119  
Allentown, NJ 08501  
(609) 371 - 7433

**FIGURE 1 -  
Dry Well Installation for Basement  
Sump Pumps  
29 Berrien Ave Ave West Windsor, NJ  
Block 74 Lot 40**

Prepared By: RJW

Reviewed By:

December 2017